


Rough-In And Installation Information For Column Showers And Drains-Type H supplies From Below/Vent Through Column

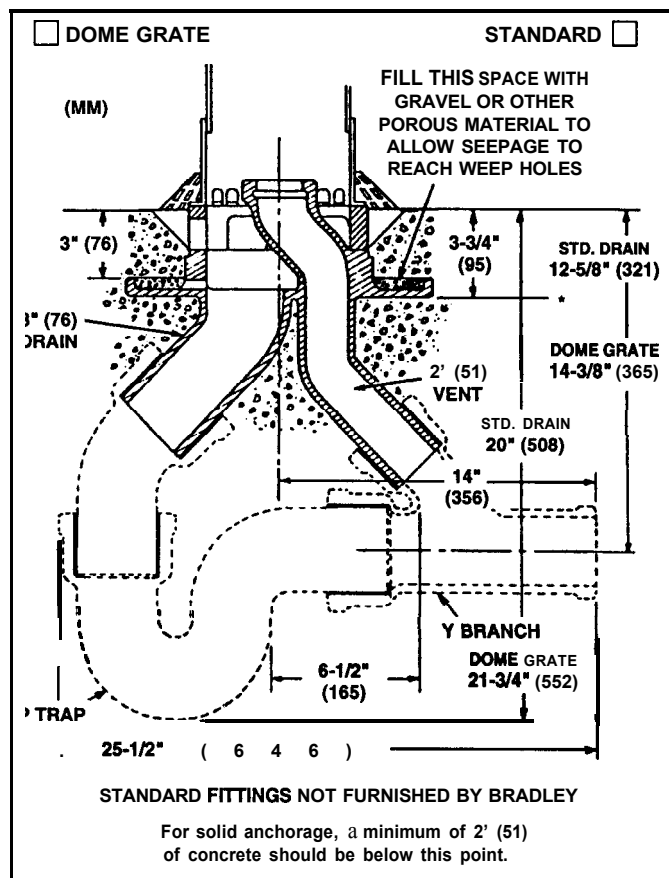

Drain Rough-In Instructions

1. Determine direction of shower spray. Showerhead locations relate to drain placement and where this is critical (close to doors, with Modesty Modules, etc.) careful drain placement is important. Refer to appropriate diagram on page 2 and rotate drain, using index blot, so showerheads will be in desired position.
2. Locate finish floor line. Position drain so that top of disposable washer will be flush with finish floor. Floor should pitch to drain 1/4" per foot. (19 mm per meter)
3. Level top of drain. Be certain drain fitting is level so that Column will install plumb.
4. Install supply sleeves. Secure (2) 1" nom. x 5-3/8" pipe nipples to drain.
5. Make connections. Connect drain and vent horns to waste piping and stub-up supplies through sleeves. Double check steps 3 and 4 above.

Dome Grate Drains

Procedure is identical to that outlined except:

- A. Prior to step one, assemble drain pan and spacer to casting.
- B. Disposable washer will be on drain pan instead of drain casting. Position drain and pan assembly as in step two above. The two halves of the dome grate are installed after shower Column is in place.

Column Installation


1. Flush supply lines.
2. Remove Column cover and insert a piece of 2" vent piping appropriate to installation. Position Column over drain and screw pipe into vent connection.
3. Remove disposable washer from top of drain pan and bolt Column to drain.
4. Connect supplies, as shown, through access opening.
5. Place top cover over vent and complete vent installation.
8. Test for proper operation. Replace hand hole cover and secure Column cover.

Showerhead Locations And Piping Dimensions-Top View


◆ INDEX BOLT LOCATES SHOWERHEAD ON C/L OF ACCESS OPENING AND NAMEPLATE.

ROOM CENTER MODELS


□ 6CH
□ 6MSH

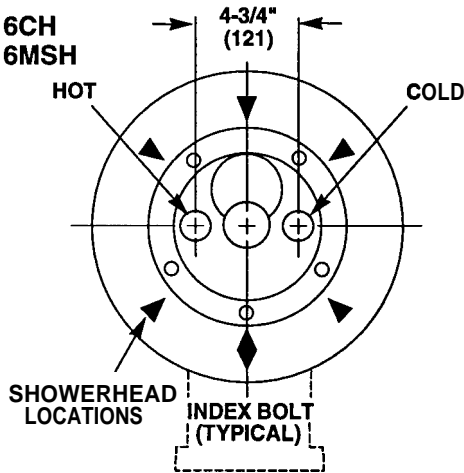

□ 4CH
□ 4MSH
□ 4MMH
□ 2MMH

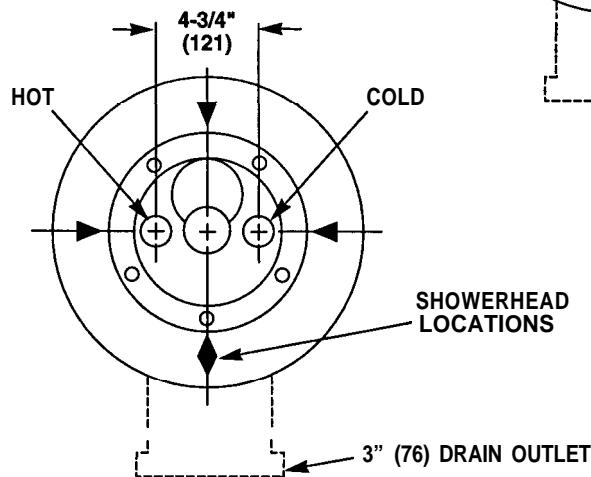


□ 5CH
□ 5MSH

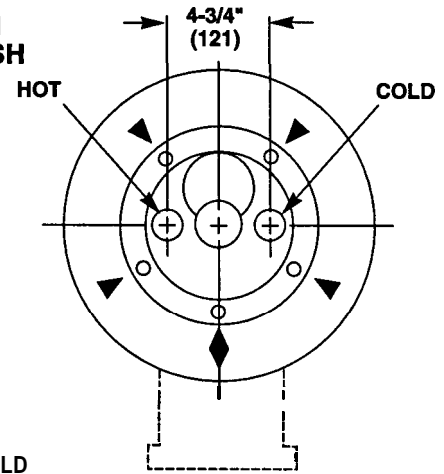

WALL MODELS


□ 3CH
□ 3MS4H
□ 3MS2H

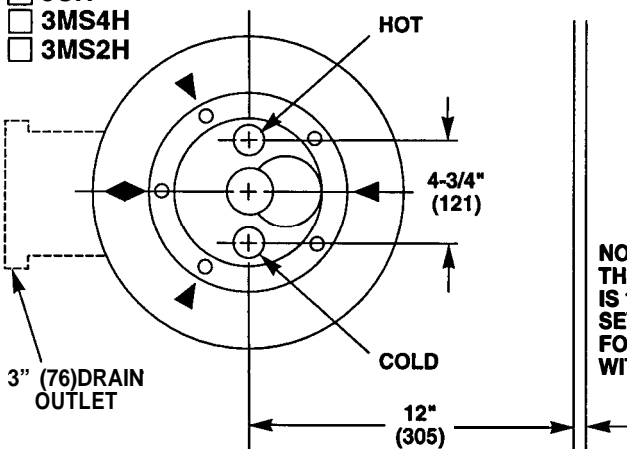

□ 2CH
□ 2MS3H
□ 2MS1H

NOTE:
THIS DIMENSION
IS 14-9/16" (370) WHEN
SETTING DRAIN
FOR SHOWERS
WITH PARTITIONS.

CORNER MODELS

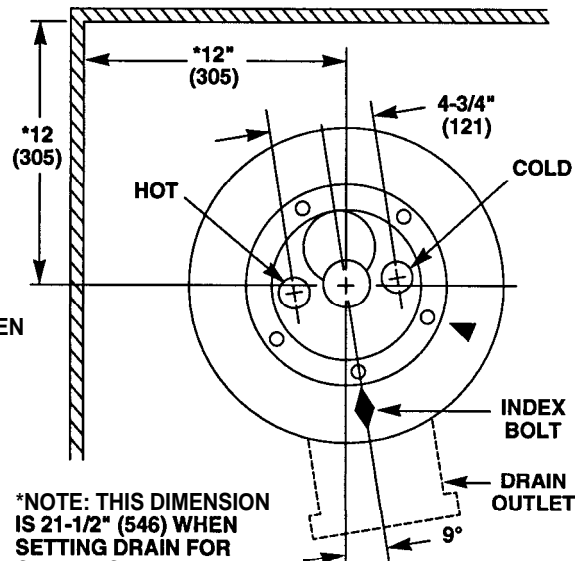

*NOTE: THIS DIMENSION
IS 21-1/2" (546) WHEN
SETTING DRAIN FOR
SHOWERS WITH
PARTITIONS.

SUPPLIES

Supply lines to Bradley Column showers should be a minimum of 1" (25) NCT.
Supply inlets are 3/4" (19) male NCT. Single temperature systems connect to
the right hand (cold water) side of manifold.