

Installation Instructions

Installation Instructions for Optional Column Shower Shroud

NOTE: The column shower must be installed before the shroud. The shroud clips and knock-outs in the column cover must also be prepared. Before making the supply connections, slide the shroud slip ring up the vent and supply piping.

IMPORTANT: If the shroud is longer than 48" (it has a welded seam rather than a snap together hem) it must also be slid up the vent and supply piping.

If the supply connections are completed prior to the shroud installation, the supplies will have to be disconnected in order to slide the slip ring (and shroud if over 48" long) over the vent and piping.

Step 1: Preparing the Column Cover

1. Remove the column cover from the top of the shower by loosening the screw(s) that secures the column cover retainer.
2. Carefully remove the necessary knock-outs from the cover (see Figure 3).
3. Insert the three shroud clips into the locations shown in Figure 3. Snap the clips in place using a flat blade screwdriver.
4. Reassemble the cover on shower and proceed with remainder of installation.

Step 2: Complete the Installation

1. Make sure the slip ring (and shroud if required) is in place over the vent and supply piping.
2. Fasten the slip ring to the ceiling with five 5/16" diameter screws (supplied by installer) (see Figure 2 for screw location dimensions).
3. Bring the shroud seam around the vent and supply piping and slide the shroud together (0-48" long shrouds only). Fasten hem together using the supplied #6-32 screws.
4. With the column cover in place and the supply connections made, lower the shroud and fasten to the column cover with the #10-24 screws provided (see Figures 1 and 3).


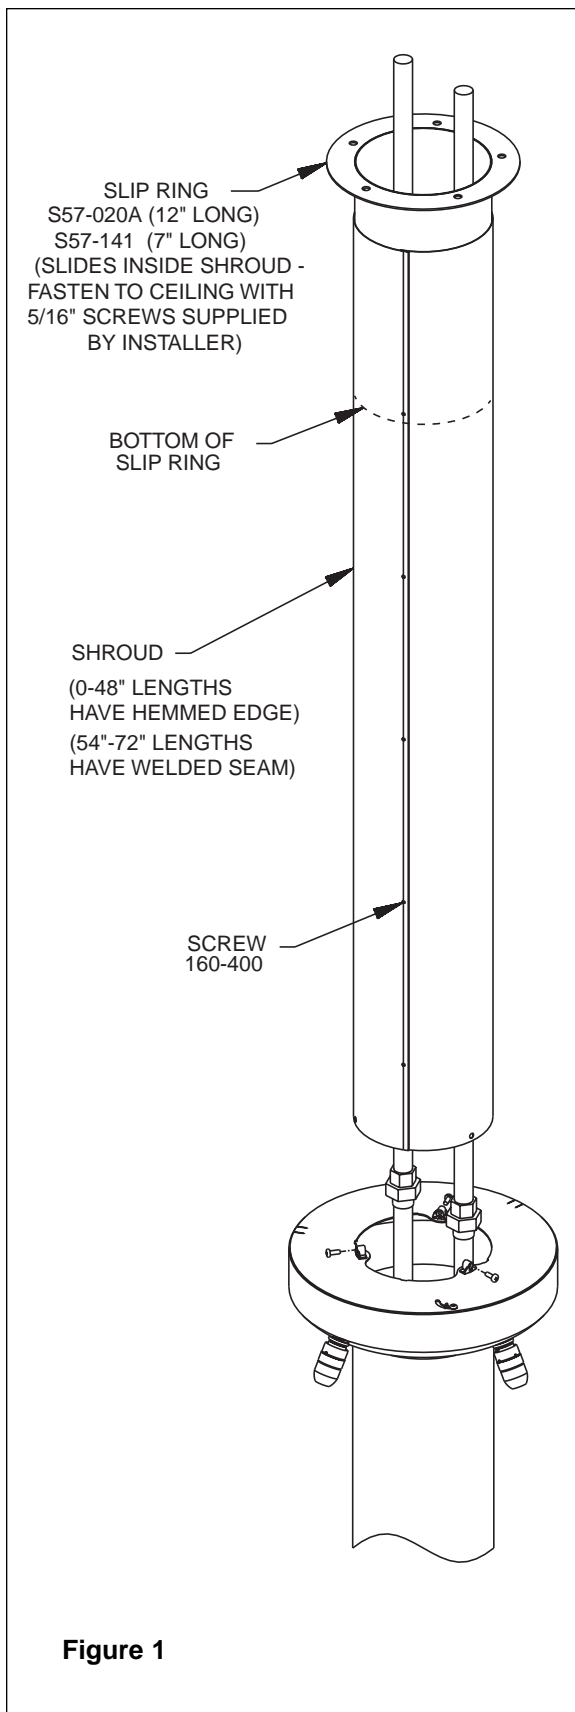


Figure 1

Installation Instructionscontinued

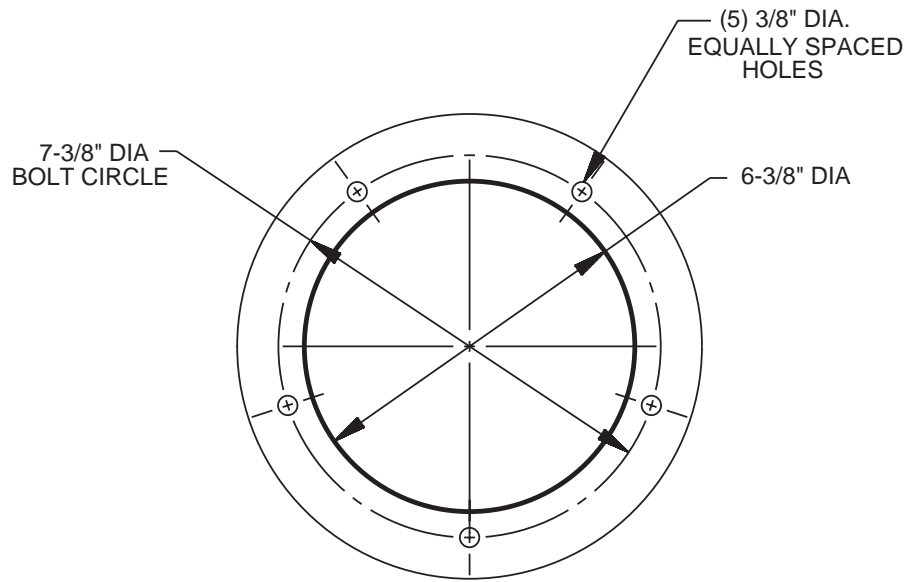

Slip Ring Bolt Pattern

Figure 2

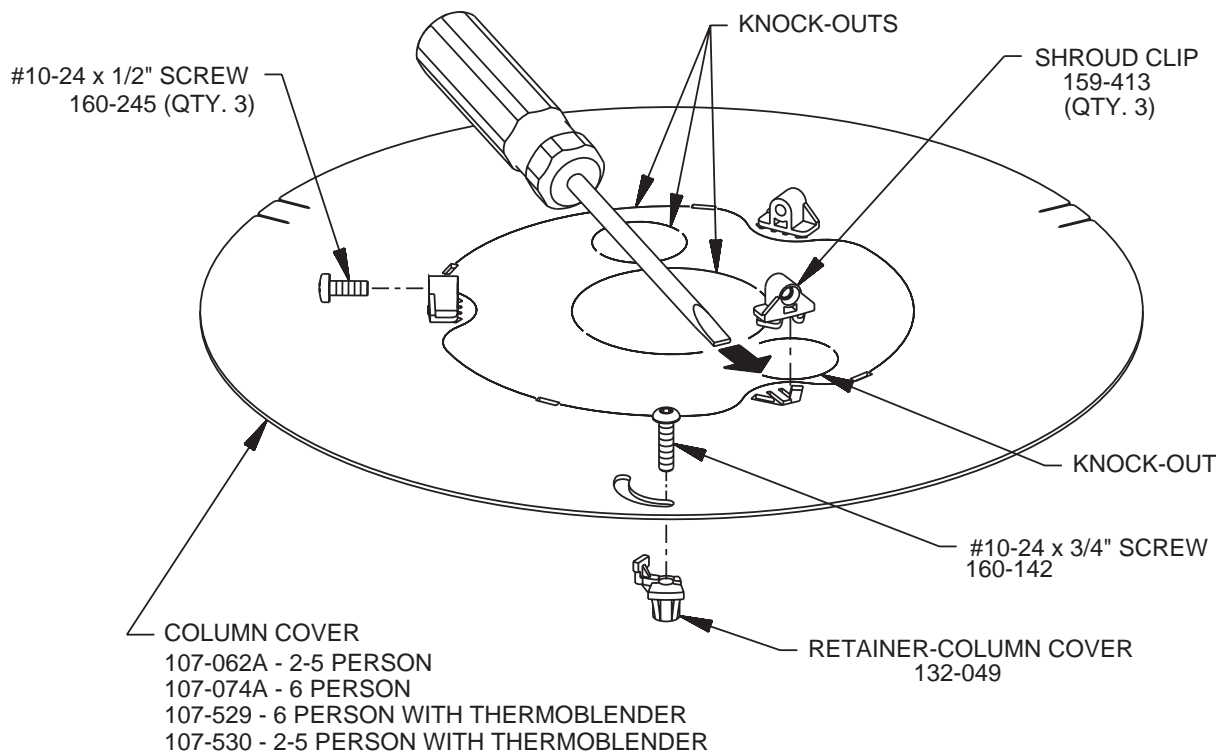


Figure 3