
Shower Accessories

Stops

Bradley recommends the use of shutoff stops with all shower equipment. Supply line or individual stops simplify maintenance and permit the use of other shower equipment while individual units are being serviced. Generally, the fewer control valves served by the stops, the better. Stops at each control valve or preassembled shower fixture are preferred.

Supply Line Stops (suffix ST)

Supply line stops serve entire shower units; i.e. all six heads on a Column shower. They may also serve portions of a shower system; i.e. six heads of a large Panelon system. Available for all types of Bradley showers.

Individual Stops (suffix IS)

Individual stops serve single shower stations. They are more costly than supply line stops, but by isolating maintenance problems to one valve set, they allow the balance of the shower stations to remain in use. Available for all types of Bradley showers except Columns. Easily accessible screwdriver stop allows servicing of valve mechanism.