
## **Code Filler Installation Instructions**

**Steps** (Refer to the figures below when installing code filler.)

- 1. Position the code filler over the prepunched square hole in the cabinet.
- 2. Secure the code filler to the cabinet using the two screws provided.
- 3. Tighten the screws. NOTE: The method of supply connection to the back of the code filler is dependent on the operating valve installed. Refer to the valve installation instructions to make the supply connection to the code filler.

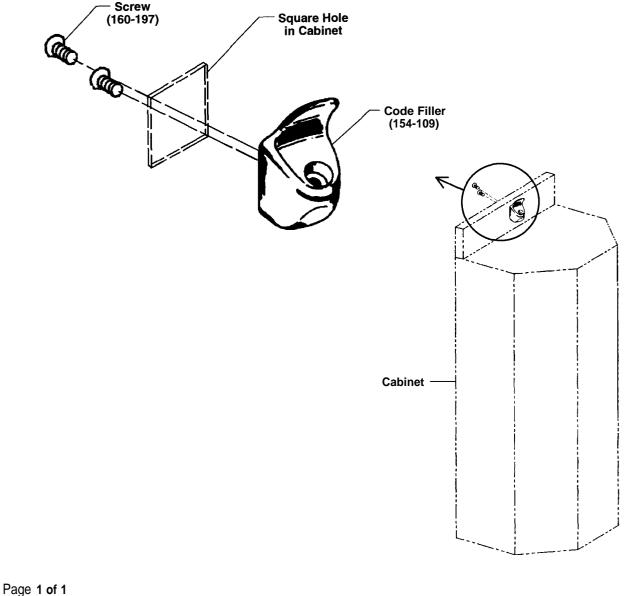

215-981; EN 94-707

Bradley BRADLEY

© Copyright 1994 Bradley Corporation • Menomonee Falls, WI

P.O. Box 309, Menomonee Falls, WI 53052-0309 PHONE (414) 251-6000 FAX (414) 251-5817