



INSTALLATION INSTRUCTIONS *1053

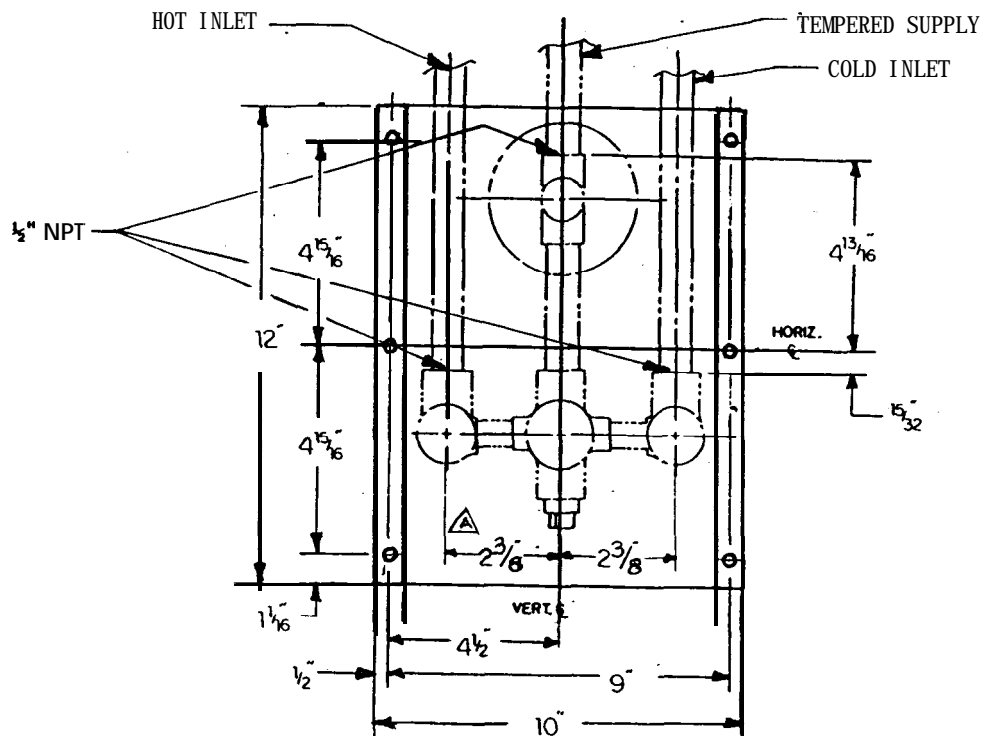

1. SELECT POSITION ON WALL WHERE FIXTURE IS TO BE INSTALLED. STRIKE HORIZONTAL AND VERTICAL CENTER LINE.
2. MAKE AND INSTALL SIX SUITABLE WALL ANCHORS. (BY OTHERS)
3. MOUNT BOX TO WALL USING SIX SCREWS. (BY OTHERS)
4. CONNECT INLET AND SUPPLY PIPES.

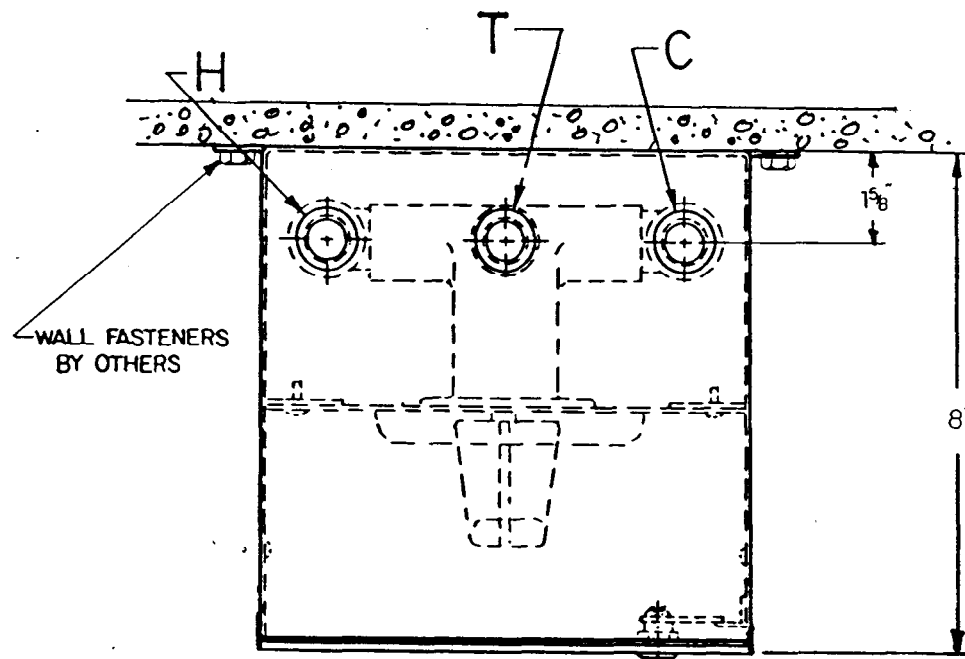

REVA EN88-697

EN87-790

Bradley
CORPORATION

PO Box 309, Menomonee Falls, WI 53051

INSTALLATION INSTRUCTIONS

215-716

PAGE 1 OF 1