


# 956, 956-30, 9561, 9561-30, 9567 and 9568 Shower Seat

# Installation

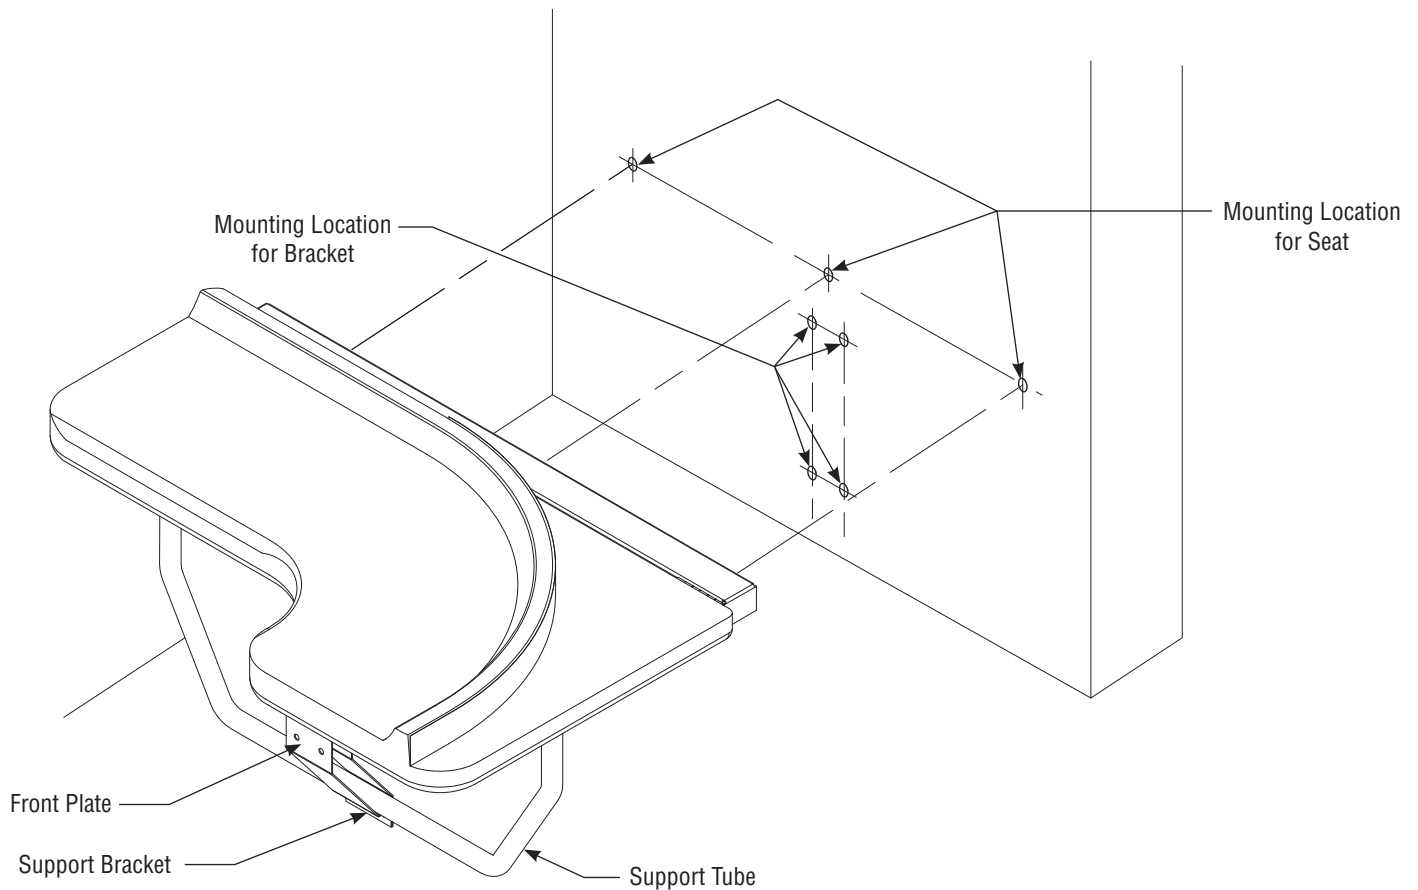

**WARNING: To ensure adequate support for the shower seat, all anchoring devices (supplied by installer) must be appropriate for specific wall construction. Bradley cannot assume responsibility for an improperly installed shower seat.**

1. Measure and scribe a horizontal line  $16\frac{1}{16}$ " above the finished floor.
2. Fold the bottom edge of the template along the dotted line as indicated below.
3. Align the template "Line A" on the horizontal line scribed on the wall and adhere the template to the wall.
4. Using the template, mark the three shower seat and four support bracket mounting locations on the wall.
5. Install wall anchors for hardware appropriate for your wall construction at the seven mounting locations.
6. Mount the shower seat to the wall with hardware appropriate for your wall construction at the three mounting locations.
7. Position the support tube in the support bracket as shown. The support tube should rest on the bottom of the front plate.
8. Position the support bracket against the wall and adjust the bracket vertically until the seat mounting holes align with the wall anchors. A properly installed seat will decline downward from front to back  $2^\circ$  to  $3^\circ$  for water drainage.
9. Mount the support bracket to the wall with hardware appropriate for your wall construction at the four mounting locations.

P20-041 Rev. G; ECM 09-15-0023  
© 2008 Bradley Corporation 8/25/09



P.O. Box 309, Menomonee Falls, WI 53052-0309  
TEL. 800.BRADLEY (800.272.3539) FAX 262.251.5817  
bradleycorp.com