


THIS
END
UP

Installation Instructions

- NOTE:** An existing device supplied by installer must be carefully selected to ensure adequate support for the shower seat.
1. Verify that the existing device meets the provided minimum, mark and drill the two mounting holes appropriate for your height requirements.
 2. Position the shower seat mounting brackets to the wall, check to make sure the seat surface is level.
 3. Tighten the mounting hardware to the wall, check to make sure the seat surface is level.
 4. To the wall with the appropriate hardware, secure the mounting hardware to the wall to make sure the seat is level.
 5. When handling the wall bracket, make sure the 3/8" round hole is at the top of the bracket.
- NOTE:** When handling the wall bracket, make sure the 3/8" round hole is at the top of the bracket. Secure the wall bracket on the wall with appropriate fasteners, make sure the support tube is nesting inside the bracket (see Fig. 3).

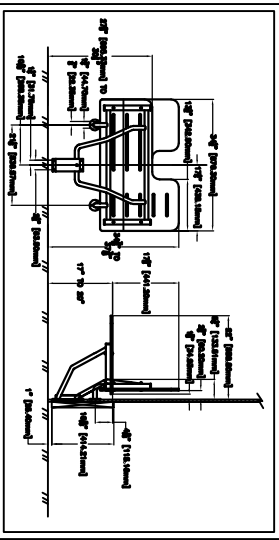

TO REMOVE SEAT COMPRESSION FROM LEFT-HAND TO RIGHT-HAND

- A. Remove the four corner nuts and lock washers from the underside of the seat; remove the carriage bolts.
- B. Lift up the seat and flip it 180° (to right-hand configuration).
- C. Install the seat into the carriage bolt lock washer, corner nuts, splitting the corner nuts to 20 in. dia.

PG-158, REV. A, ECH-08-1510
 © 2004 Bradley Corporation
 Page 1 of 1 (2/2/04)



SEAT HEIGHT 17" OFF FINISH FLOOR
 SEAT HEIGHT 18" OFF FINISH FLOOR
 SEAT HEIGHT 19" OFF FINISH FLOOR
 SEAT HEIGHT 20" OFF FINISH FLOOR