
## Installation Instructions for Tailpiece

## Part No. S19-746

## **Tailpiece Installation**

NOTE: Refer to the illustration shown below.

- 1. Shut off the water supply to your eye wash unit.
- 2. Thread the tailpiece into the inlet-drain fitting as shown.
- 3. Turn on the water supply to your eye wash unit and check for leaks and adequate water flow.

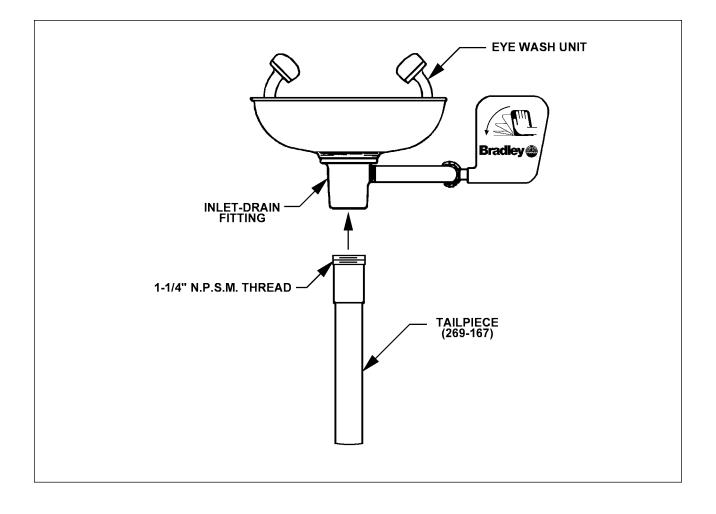



P.O. Box 309, Menomonee Falls, WI 53052-0309 TEL. 1-800-BRADLEY FAX 262-251-5817 http://www.bradleycorp.com

215-496 Rev. A; EN 00-569 Page 1 of 1