

Bariatric Grab Bar Series



Heavy Duty Bariatric Stainless Steel Grab Bar

 \square Models 812 (concealed) & 817 (exposed) — 1-1/2" O.D.

☐ Models 832 (concealed) & 837 (exposed)— 1-1/4" O.D.

 \square Models 852 (concealed) & 857 (exposed) — 1" O.D.

Product Materials

FLANGES: 31/8" dia. 13 gauge stainless steel.

ESCUTCHEONS: 22 gauge stainless steel. One-piece drawn construction with exposed surfaces in architectural satin finish. Snap over flanges to conceal mounting screws.

TUBING: 18 gauge stainless steel, seamless construction with exposed surfaces in architectural satin finish. Bent ends of tubing pass thru the flanges and are welded for maximum strength. Intermediate supports are contour cut and joined by welding to form an integral part of the grab bar. All exposed welds ground and polished to blend. Mandrel bending process maintains uniform bar diameter. Return provides 1½" standard safety clearance between wall and bar.

Strength

When properly mounted, all Bradley heavy duty grab bar systems meet or exceed the requirements of ANSI Standard A117.1, the ADA and ABA Accessibility Guidelines for Buildings and Facilities (ADAAG), and the Uniform Federal Accessibility Standard (UFAS). Select dimensions of configurations are 3rd party tested to support up to 900 or 1000 pounds. See configurations on following page. Wall must be reinforced in the area of the grab bar in order to support the load it is intended to support.

WARNING Only models/configurations listed on this tech data have been rated for use up to 900 or 1000 pounds. See info on following page for available options/configurations.

Installation

For instructions on installation, warnings and maintenance, please visit www.bradleycorp.com.

& ADA Compliant

Consult local and national accessibility codes for proper installation guidelines.


Conformity and compliance to local and national codes is the responsibility of the installer.


Guide Specification

Grab bar shall be fabricated of satin finish stainless steel with concealed mounting flanges in sizes and configurations as indicated. Install with Bradley Mounting Kits as indicated.

Orders composed of products indicated as **Bradex**® will be available to ship in three days after receipt of order at the factory. There is no pricing penalty for this service from Bradley.

Page 1 of 2 3/27/2018
This information is subject to change without notice.
Bradley_GrabBar_Bariatric_812_817_832_837_852_857

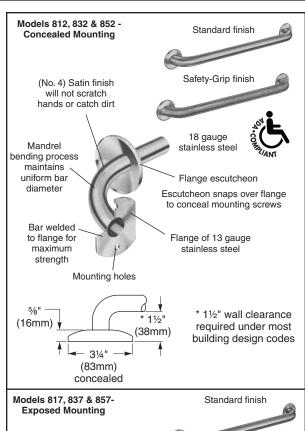

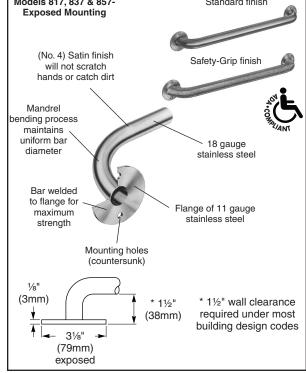

© 2018 Bradley P.O. Box 309, Menomonee Falls, WI 53052-0309 800 BRADLEY (800 272 3539) +1 262 251 6000 bradleycorp.com



Configuration Information


Bar	iatric Models	852/857	832/837	812/817
	OD	1"	1-1/4"	1-1/2"
Rating (LBS)		900	900	1000
Configuration	Grab Bar	Bariatric Models		lels
Number	Length	852/857	832/837	812/817
001-12	12"		Х	Χ
001-18	18"	Χ	Х	Χ
001-24	24"	Χ	Х	Х
001-36	36"		Х	Χ
001-48	48"		Χ	Х
001-54	54"			Х
059	up to 42" x 54"		Х	Х
057	30" x 30"		Х	Х
054	33" x 30"			Х
055	24" x 24"			Х
060	36" x 60" x 36"			Χ


Optional Features


Features		Suffix
	Safety-grip finish	-2
	High-polish finish	-4
	Safety grip with high-polished finish	-7
	Antimicrobial finish: 1-1/2" - 001-18", 001-24", & 001-36"only	-AM


Bradex® Item - Standard Finish


Bradex® Item - Standard Finish or Safety Grip Finish (-2)

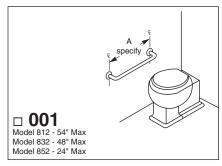


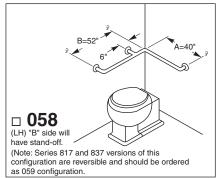


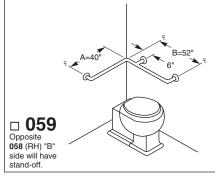

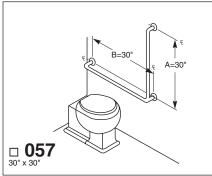

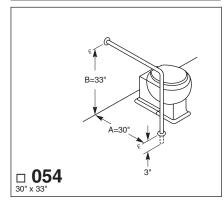

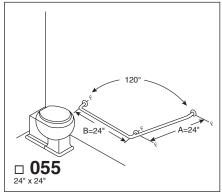

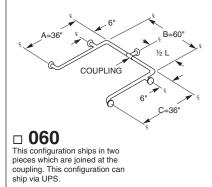

Orders composed of products indicated as **Bradex**® will be available to ship in three days after receipt of order at the factory. There is no pricing penalty for this service from Bradley.

Page 2 of 2 3/27/2018
This information is subject to change without notice.
Bradley_GrabBar_Bariatric_812_817_832_837_852_857